



Phone: 780-645-6998
Toll Free: 1-888-654-6998
Fax: 780-645-6506
E-mail: info@trailercanada.com
www.trailercanada.com
Box 130, 5037-50th Ave, St. Paul, AB T0A 3A0

How To...

How To Understand Tubular Axle Part Numbers

Understanding the break-down of assembly part #'s

Our part numbers for Axles are assigned in accordance to the capacity, bolt pattern, type of brakes (if any) and what type of spindle is used. When ordering axles, the following information should be helpful to you:

EX: 205451 - ST - EZ 2,000 lb., 5 on 4 1/2" Idler Straight with E-Z Lube

20 / 545 / I / -ST / -EZ

20: The first group of digits represent the capacity (20 = 2.000 lb. capacity)

545: The next group represents the number of studs and the bolt pattern of the studs (545 = 5 on 4 1/2".655 = 6 on 5 1/2".865 = 8 on 6 1/2", etc.)

I: This tells you what type of brakes are used, if any.
(I = Idler. E = Electric. H = Hydraulic. HFB = Hydraulic Free-Backing. A = Air)

ST: This tells you what type of spindles are used (ST = straight. 4D = 4" Drop)

EZ: Any other options (EZ = E-Z Lube Spindle. SPR = Springs Mounted)